

Instruction Manual

Cordless: V-OC400B-Plus

Mains: V-OC400M-Plus



CAUTION

Read instructions before use

KEEP FOR FUTURE REFERENCE

Instruction Manual

IMPORTANT INFORMATION

Please ensure that you read, understand and comply with these instructions prior to use of this machine.

Keep a copy of these instructions safe for future reference.

Warning and information stickers or notices on the machine provide important directions and information for safe operation.

These instructions contain safety information and should be strictly adhered to during use, together with any national, regional or local safety requirements, risk assessments or other legal duties.

Packaging should always be recycled where possible and should be kept away from children as there could be a risk of suffocation.

The voltage and power supply indicated on the rating plate of the machine or charger should correspond to the voltage or power supply of the electrical source.

Safety class 1 appliances may only be connected to sockets with proper earthing.

Please only use the charging cable as prescribed by the manufacturer. For replacement parts cables please contact the manufacturer or visit www.VictorFloorcare.com.

Check the charging cable with mains plug on the charger or machine before every use. If the power cord, plug or battery is damaged do not use the machine and seek a repair from a properly qualified individual.

The appliance or charger may only be connected to an electrical supply which has been installed by an electrician in accordance with IEC 60364.

Never touch the charging cable or plug with wet hands.

Do not clean the machine with a water hose or high-pressure water jet.

Always operate the machine within a safe environment, do not attempt to use the machine to clean explosive liquids, combustible gases, explosive dusts as well as undiluted acids, alkali's or solvents.

Do not use to clean up petrol, paint thinner or heating oil or any other potentially dangerous, toxic or explosive substance.

Do not use this machine underwater, it is suited for use on dry, moist or wet floors with a maximum water depth of 0.75 cm.

Only use the machine with chemicals that have been approved for use in the manner intended. Always comply with the chemical manufacturers guidelines with regard to application, dilution and disposal.

Always follow statutory rules for disposal and laundry of dirty pads and unused chemical solutions. Do not leave solutions in the machine spray bottle during storage between uses and always label the spray bottle indicating the solution inside. Do not mix solutions and always rinse the spray bottle and flush through the solution spray system thoroughly after each use.

The machine should only be used for its intended purpose which is the cleaning of floors. The machine should never be used without a pad, mop or other recommended cleaning media affixed to the base of the drive plate. Failure to follow this advice may lead to damage of the drive plate.

Protect the machine against frost or other adverse and potentially damaging conditions during use and storage.

Instruction Manual

The operator must use the appliance properly, paying close attention to and considering local conditions, and any third parties in the vicinity particularly children.

Never leave the appliance unattended, except when it is placed in its approved storage location. Always use appropriate Personal Protective Equipment when operating the machine in your chosen environment.

The machine may only be operated by trained users or those who have a proven qualification and expertise in operating the machine.

The machine must not be used by children or people who have not been instructed accordingly. Before repair or opening any part of the machine, ensure that it is disconnected from its power source.

For battery powered machines disconnect the battery from the motor and or charger.

Ensure that the machine is switched off and the battery plug disconnected for transportation. Only use accessories and spare parts which have been approved by the manufacturer, this will enhance the performance of the product.

Always observe local safety regulations regarding portable commercially used appliances.

Always follow the instructions of the battery manufacturer and the charger manufacturer. Always follow the statutory requirements for the safe use and disposal of batteries.

For long term storage it is recommended to keep the battery at 5-25°C in temperature. It is also advised to store at 40% capacity and every 3 months fully charge/discharge the battery. High ambient humidity may cause battery deterioration. The battery should always be stored away from rain and frost.

Do not use the battery in ambient temperatures below -10°C or above 40°C.


Always keep the batteries clean and dry and avoid contact with water and impurities such as metal dust.

Do not place tools or similar on the batteries and avoid touching the terminals. There is a risk of short circuit or explosion.

Do not work with open flames or smoke when using the machine or in the vicinity of the battery charging environment due to risk of explosion.

Used batteries are to be disposed of according to EC guideline 91/157/EWG or the corresponding national regulations and in an environmentally sensitive manner.

Instruction Manual

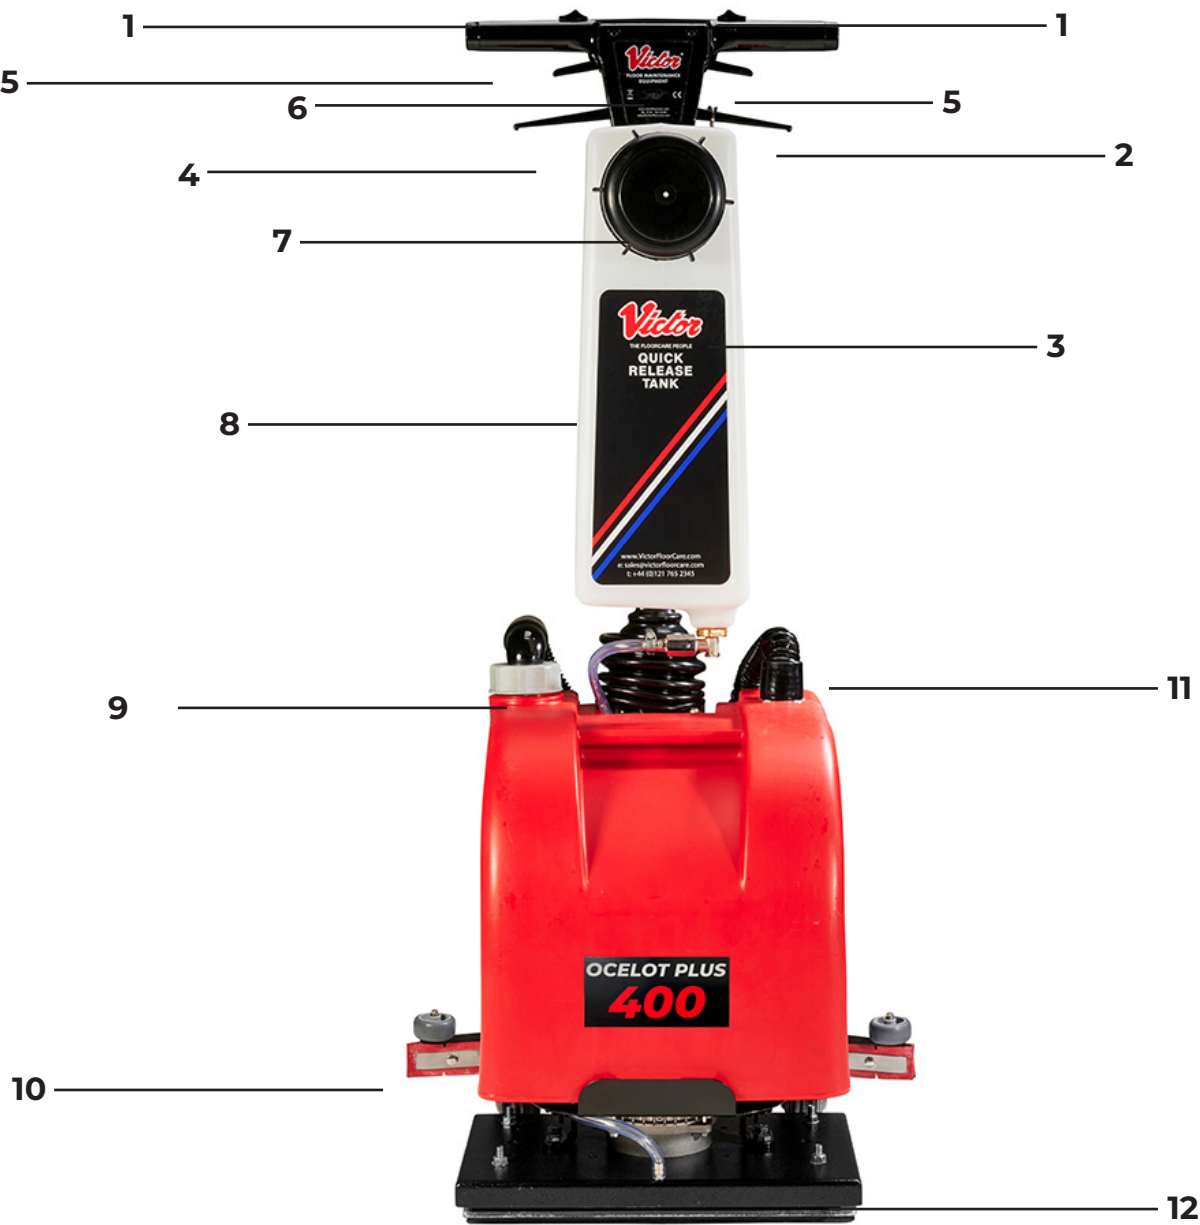

	Description
1	Safety switch
2	Solution trigger
3	Solution tank
4	Handle Release Trigger
5	Motor start trigger
6	Serial number label
7	Solution tank cap
8	Swap out battery
9	Dump hose
10	Squeegee assembly
11	Vacuum Hose
12	Drive plate

Instruction Manual

The Ocelot Plus

The Ocelot Plus features all the capabilities of the Ocelot 400, but with the addition of vacuumation for wet pick up. This high speed oscillating machine which effortlessly achieves outstanding results with reduced chemical usage.

The Ocelot plus can be used for over under 2 hours or up to 3 hours with the vacuumation switched off. The battery is fully recharged from flat in under 4 hours. The Ocelot features a compact design whilst maintaining a 400 mm cleaning pad. This makes the Ocelot 400 lightweight and manoeuvrable enough to clean in tight spaces.

The Ocelot plus is available in either mains or cordless versions. The Ocelot Plus Cordless features a swap out battery, making it ideal for operatives who require multiple batteries for longer runtimes. Alternatively the Mains version features a 15 metre 13A cable.

The Tank

The machine comes fitted with a tank. It can be filled without taking it off the machine by removing the black cap and pouring in water or pre-mixed solution. If you need to remove the tank from the machine, first disconnect the pipe at the bottom of the tank by pushing the button on the connector. Disconnect the chain which attaches to the trigger on the machines handle.

With the tank disconnected from the pipe and the trigger you can remove it from the machine by unscrewing the two screws on the tank back, then just lift it off

The tank can be filled under a standard tap or by hose. To re-fit the tank, place the tank into the holders on the handle and tighten the screw nuts at the back, then push the pipe connectors together until you hear a click. Return the chain to the trigger and ensure it lifts the activation bar when pulled.

Fitting the Pads

Ensure battery isolation switch is in the off position and the handle is in the lock position. Ensure both the recover and solution tanks are empty. Tilt the machine back onto its wheels and lay the machine flat on the floor. From behind the drive plate, place the pads onto the base of the machine. Push the pads on so they are securely fitted and grip the drive face, make sure they are centred across the drive. Then carefully lift the handle of the machine and lower the pads onto the floor. The machine is now ready to use.

Operating the Machine

To get power to the machine first turn on the power switch on the top of the handle. If operating a cordless machine, ensure the battery isolation switch is in the on position. A red light should appear, this indicates there is power from the battery.

Release the handle release trigger and lower the handle to set it to a comfortable height.

To turn the machine on, slide either of the safety switches to the outside of the machine and pull the small lever under the associated switch. To stop the machine simply release the levers.

To turn the machine off, release the levers and turn off the battery isolation switch so no light shows.

To clean the floor with the machine simply move the machine over the floor by pushing or pulling.

To activate the solution simply pull the solution trigger lever located on the left of the handle.

You do not need to keep the solution trigger pressed all the time, just pull the trigger when required. Having control over the solution function means you use less solution and can use more solution where necessary, for example to clean a stubborn mark.

Instruction Manual

Charging the Battery


Before charging the battery read and be familiar with the charger instructions. A representative copy has been printed below for your convenience.

The battery can be charged whilst still attached to the machine. Or if you are rotating batteries, please use the key to remove the battery and charge at the designated charging station.

Plug the charger into a mains socket. Attach the battery to the charging socket. Turn on the mains power.

Charging is complete when a green light is displayed on the charger.

IMPORTANT - When the battery requires charging the machine will stop and the battery indicator light on the battery will be mostly red. Please ensure that you turn the battery isolation switch to the Off position when this happens before you charge the battery.

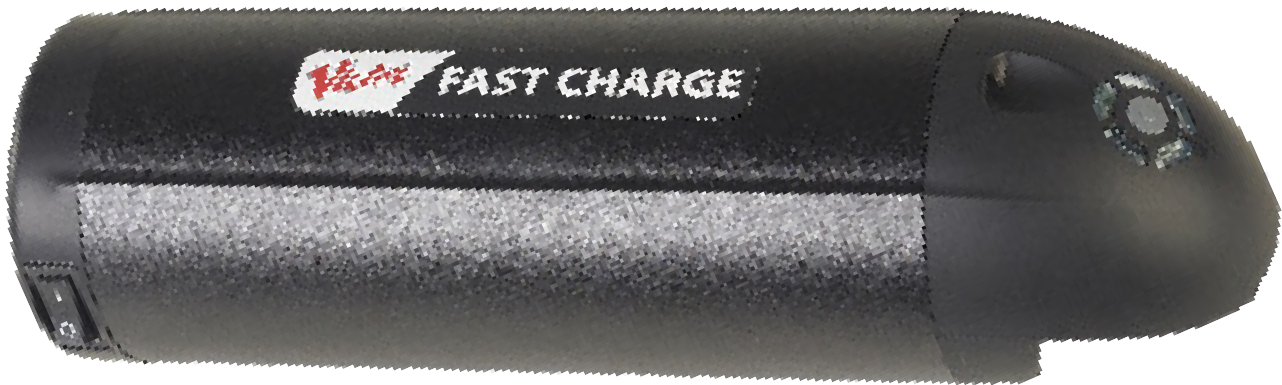

Battery Specs	
Capacity	12Ah
Voltage	24V
Cells technology	Li-Ion
Output	Touch
Input	5.5*2.5 mm
Dimensions	355x109x99mm
Weight	2.4kg
Motor rating	up to 250W

Instruction Manual



WEEE Directive

Products bearing this symbol should not be disposed of in your general waste. IIC Products Ltd t/a Victor Floorcare is a registered producer under the WEEE Directive - (number WEEE/MM0723AA) and has procedures in place for dealing with the end of life treatment & disposal of obligated equipment. Please contact the company or visit our website for more details.

At the end of life the battery pack should be returned to IIC Products Ltd t/a Victor Floorcare who will dispose of the pack safely and in accordance with all WEEE and environmental regulations.

Do not throw the battery or machine in the bin at the end of their life. The battery contains substances that may be harmful to the environment.

The only proper way of disposal and replacement is by returning the battery to Victor, who can supply a suitable replacement battery.

Never bury the end of life battery pack or incinerate as the batteries contain harmful substances. Battery removal should only be undertaken by a trained professional familiar with maintaining and repairing Victor equipment.

Trouble Shooting		
Problem	Cause	Solution
No power to the unit	Safety switch on handle not pulled across Standby switched on handle not pressed Battery isolation on battery switch not pressed Battery not charged Battery not connect correctly	Move and hold switch in on position Press the switch Press the switch Charge the Battery Check battery is connected
No Fluid Dispensed	Check cut off tap Solution pipe not attached Solution pipe damaged Solution pipe blocked	Turn tap to open position Attach pipe Replace pipe Unblock or replace pipe
No suction	Suction hose not connected Recovery tank full Squeegee damaged or unclean	Check connection is correct Empty recovery tank Clean

After sales Support

For further product information, service or repair support or training assistance
Please contact IIC Products t/a Victor Floorcare on +44 (0)121 706 5771.
Or contact us by email at Technical@victorfloorcare.com

Or visit us at:

www.VictorFloorcare.com

where you can watch an instructional video on how to use the Ocelot and other Victor cleaning equipment.



Contact Information:

IIC Products Ltd
T/A Victor Floorcare
Lancaster Court
Lancaster Road
Shrewsbury
SY1 3LG
United Kingdom

0121 706 3553
Sales@Victorfloorcare.com