



UCS

Upright Vacuum Cleaner

Instruction Manual

 


CAUTION

Read instructions before use

KEEP FOR FUTURE REFERENCE


Key Features

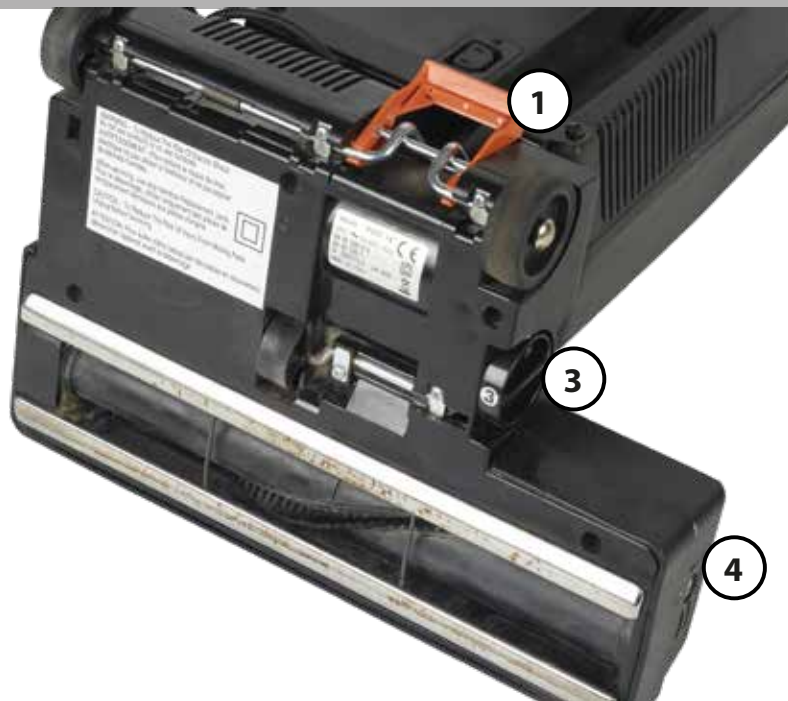

- ① Release pedal
- ② High visibility cable
- ③ Base height adjustment
- ④ Door for strip replacement
- ⑤ Control panel
- ⑥ Crevice nozzle
- ⑦ Round dusting brush
- ⑧ Hose
- ⑨ Dustbag cover catch
- ⑩ Power switch
- ⑪ Power LED

Assembling the vacuum cleaner

 **The UCS requires some basic assembly before use (no tools are required).
In the event that the UCS isn't working correctly, please check the troubleshooting guide ,
or call us on +44 (0)121 706 5771**

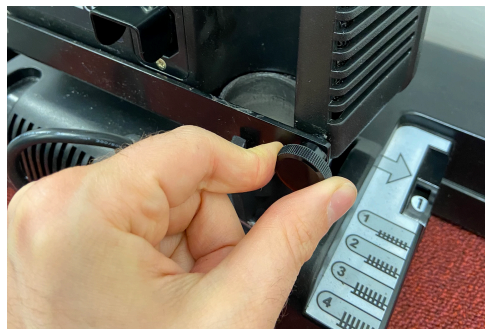

Attach the power head

Line up the exhauster unit with the power head. Use the 2 thumbscrews to attach the power head to the exhauster unit.



Attach the power cable

Push the powerhead lead into the socket on the exhauster unit. This will provide power to the brush roller.



Attach the cable restraint

The cable restraint takes the strain of the cable if pulled. To attach, loop the cable restraint onto the thumbscrew. This thumbscrew will also hold the handle in place.



Attach the handle

Place the handle into the designated hole on the exhauster unit. Once in place, use the thumbscrew to attach the cable restraint and hold the handle in place.



Attach the suction hose

Push the black end of the suction hose into the connecting tube. To use the wand hose, remove the suction hose end and attach the crevice nozzle or dusting brush. For extended reach, attach the extender tubes to the hose before connecting the crevice nozzle or dusting brush.



Changing the paper bag

 
To change the dust bag: Remove front cover by pulling the catch forward and letting the door drop forward. Remove the existing bag by sliding it off the vacuum bag inlet. Check the filter is clean and free from dust (see below). Attach a new vacuum bag by pushing the opening over the vacuum bag inlet. Close the cover ensuring the catch clicks shut.



How to change the filter

Rotate the green filter cover until the fixing tabs are free from the holding lip. Remove the filter from the filter cover and replace. Rotate the green filter cover until the 2 tabs are snugly beneath the holding lip.

Motorised Brush Controls

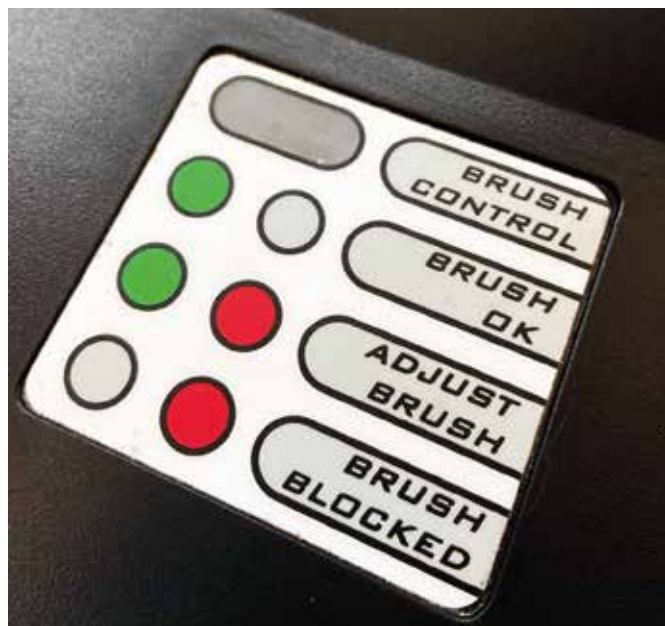

The motorized brush control device constantly regulates the operation of the beater:

Green light:

The motorized brush is working correctly.

Red light:

The motorized brush is locked or it has been subjected to excessive stress. Lift the base with the adjustment device, then move the appliance to the upright position for a few seconds and resume working. If the red light persists, switch off the appliance, unplug it and check the causes of blockage.

Red/Green light:

The roller is not touching the floor. Adjust the height of the base using the dial P. It is possible that the roller is worn or the transmission belt is broken.

How to replace the roller or transmission belt



IMPORTANT NOTE: Before proceeding with this operation, switch off the appliance and unplug it. Use a coin or flathead screwdriver to loosen the screw fastening the cover completely Q. Use a tool (e.g. a pair of pliers), to remove the hair-covered, worn strip then replace it with another, following these steps in reverse order to fit it.

Important Information - READ BEFORE USE

WARNING:

 
TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Check the voltage rating of the appliance before connecting the power cord to an electrical outlet; your power source should correspond with the voltage rating plate located on the underside of your appliance.
- A damaged appliance can be dangerous; check the packaging, the vacuum cleaner and the accessories for any sign of damage. Do not use a damaged appliance.
- Do not leave the appliance plugged in. Unplug from the outlet when not in use and before servicing or cleaning.
- Your model is a dry unit, do not use outdoors, on wet surfaces or to vacuum any sort of liquid. Only dry surfaces should be vacuumed. Do not use this appliance to pick up liquids as this could impair the electrical safety of the appliance. This applies to freshly shampooed carpets: wait until they are dry.
- Do not allow the appliance to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- This appliance is provided with double insulation. Use only identical replacement parts. See instructions for Servicing of Double-Insulated Appliances.
- If the cable is damaged it should be replaced only by an authorised after sale service. Never use the appliance with a damaged cord or plug. Never use the cleaner with a damaged cord or plug.
- If the appliance is not working as it should, has been dropped, damaged, left outdoors or immersed in water bring the unit to a dealer or to an after sale centre.
- For any repair or for purchase of accessory parts contact only your private dealer or an authorised technical centre. Do not attempt any repairs.
- Do not pull or carry by the cord, use the cord as an handle, close a door on the cord, or pull the cord around sharp edges or corners. Do not run the appliance over the cord. Keep the cord away from heated surfaces.
- Do not unplug by pulling the cord. To unplug, grasp the plug, not the cord. Do not handle the plug or the appliance itself with wet hands.
- Appliance and wands must not be used at head level to avoid injury to eyes and ears.
- Always keep hair, clothing, jewellery, fingers and all parts of the body away from openings and moving parts.
- Always put the switch into the OFF position after use.
- Use extra care when cleaning on stairs.
- When using this appliance with an accessory always unplug before connecting any rotating brush. In any case never touch the rotating brush while in use.
- Do not run the appliance over the mains cable or any extension cable.
- Avoid picking up sharp objects.
- Always turn off the appliance before connecting or disconnecting the hose.
- The mains plug and the power socket must not come in contact with water. These items may only be cleaned with a dry cloth, no moisture must touch them. Danger of electric shock.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Never use to pick up flammable or combustible liquids, such as gasoline, or use in areas where fumes may be present.
- Do not put any objects into the openings. Never use with opening blocked, keep free of dust, lint, hair and anything that may reduce the airflow.
- Do not vacuum toner dust. Toner, such as that used in printers and photocopiers can conduct electricity.
- Turn off all controls before unplugging.

SERVICING OF DOUBLE-INSULATED APPLIANCES

A double-insulated appliance is marked with one or more of the following: The words:

“DOUBLE INSULATION” or “DOUBLE INSULATED” or the double insulation symbol (square within a square).

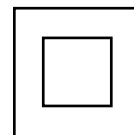

In a double-insulated appliance, two systems of insulation are provided instead of grounding. No grounding means is provided on a double-insulated appliance, nor should a means for grounding be added to the appliance. Servicing a double-insulated appliance requires extreme care and knowledge of the system, and should be done only by qualified service personnel.

Replacement parts for a double-insulated appliance must be identical to the parts they replace.

 
Important Information - WEEE Compliance

WEEE Registered Producer: WEE/MM8824AA

The European Community WEEE directive deals with the disposal of Waste Electrical and Electronic Equipment at the end of its useful life.

Our obligation is to ensure the correct disposal of Electrical and Electronic Equipment (EEE) we produce when it reaches the end of its useful life and becomes Waste Electrical and Electronic Equipment (WEEE).


The WEEE symbol on the product indicates that the product must not be disposed of with normal household waste. Instead such marked waste equipment must be disposed of by arranging to return to a designated collection point for the recycling of waste electrical and electronic equipment. Separating and recycling this waste equipment at time of disposal will help to conserve natural resources and ensure that the equipment is recycled in a manner that protects human health and the environment. Victor offers our customers the opportunity to return products at the end of their functional lives to Victor for recycling, qualifying products are marked with the WEEE symbol shown.

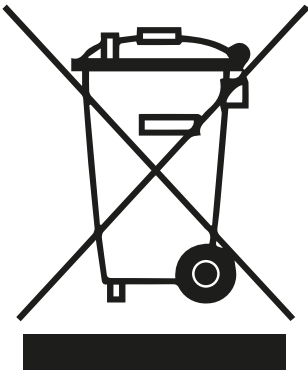

Delivery cost of any authorised product returned to Victor will be at the expense of the sender.

Only applies to EU countries

 
Schematic Datagram - Victor UCS

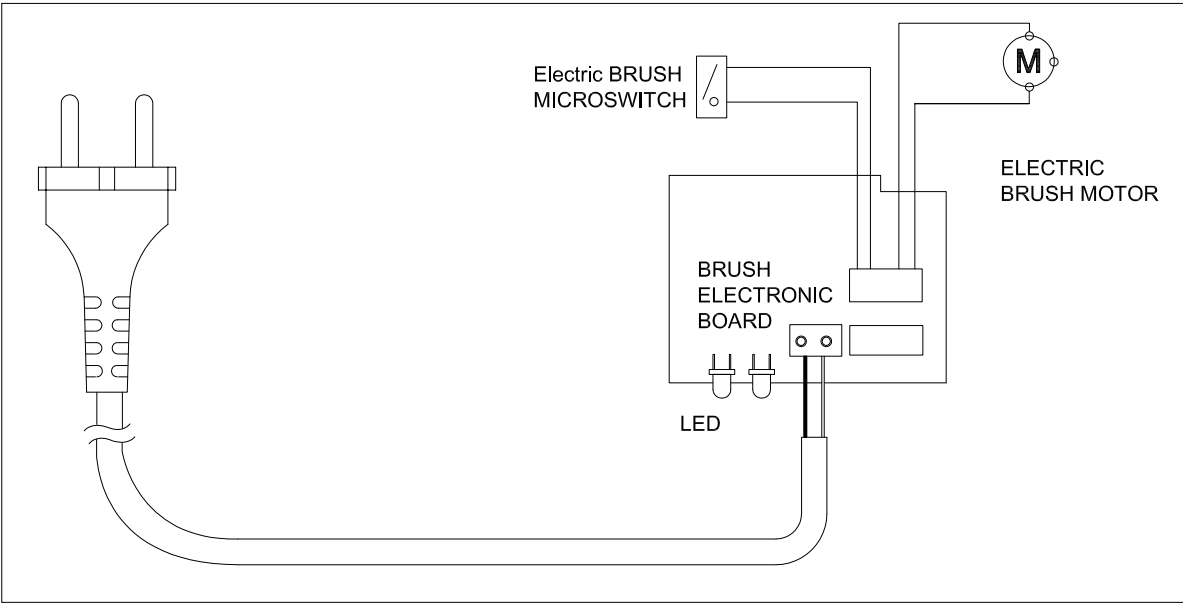

Technical Specifications

Model	Voltage	Brush Motor Power Rating	Vacuum Motor Power Rating	Capacity	Cable Length	Sound Pressure Level dB(A)
VR-UCS	230V	200 W	750 W	4l	12.5m	73
Working Width (mm)	Airflow	Vacuumation	Weight	Dimensions		
350mm	25 (l/s)	185 (Mbar)	9.5kg	1230 x 376 x 265		

 Technical Diagrams

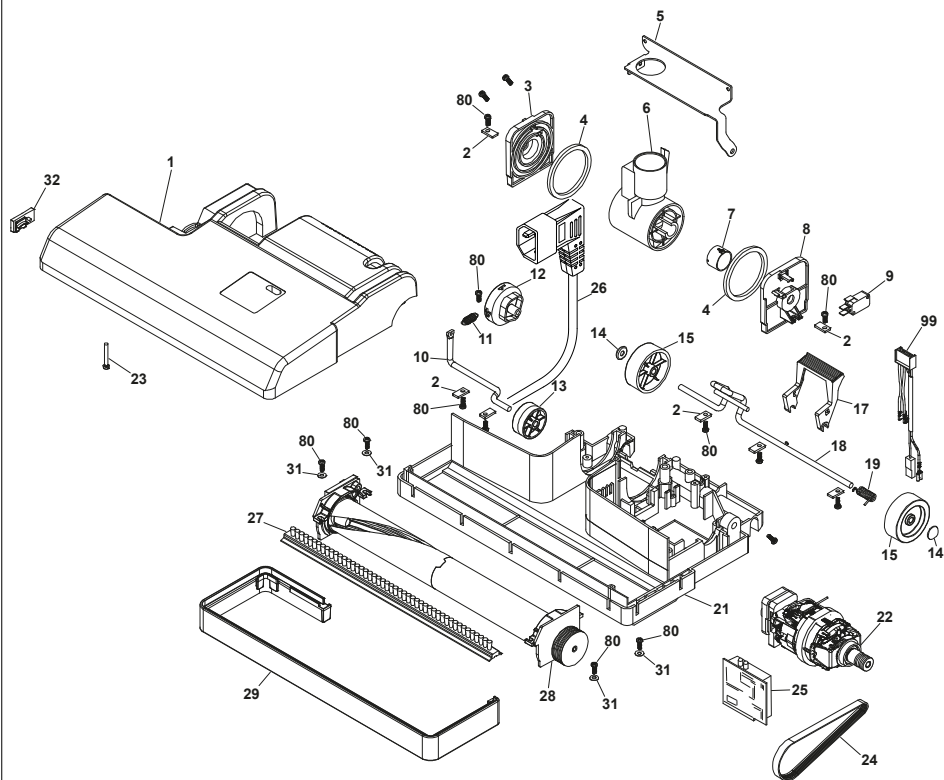


ITEM	PART No.	QTY	DESCRIPTION
1	BH.101B	1	BH350 COVER - BLACK
2	BH.102	4	LOCKING PLATE
3	BH.103	1	LATERAL SUPPORT
4	BH.104	2	GASKET FOR JUNCTION
5	R1040	1	VACUUM BRACKET
6	R1039	1	TRUNNION
7	BH.107	1	BRASS BUSH
8	BH.108	1	MICRO SWITCH LATERAL SUPPORT
9	BH.109	1	MICRO SWITCH
10	BH.110	1	FRONT SHAFT BH350
11	BH.111	1	FRONT SHAFT SPRING
12	BH.112	1	HEIGHT ADJUSTMENT
13	BH.113	1	FRONT WHEEL
14	BH.114	2	LOCKING CAP
15	BH.115	2	REAR WHEEL
16	M5X13CSK SPAX	2	5x13 COUNTERSUNK SPAX
17	BH.117	1	P E DAL
18	BH.118	1	REAR SHAFT
19	BH.119	1	HEIGHT ADJUSTMENT SPRING
20	M8X12HH	1	M8x12HH
21	BH.121	1	PLASTIC BASE
22	BH.122	1	BRUSH MOTOR
23, 31, 80	BH.SET	1	BASE SCREW SET
24	BH.124	1	BRUSH BELT
25	BH.125	1	BRUSH DRIVE PCB
26	D1017	1	CABLE AND PLUG ASSEMBLY
27	BH.127	1	BRUSH BRISTLE
28	BH.128	1	COMPLETE BRUSH
29	BH.129	1	RUBBER BUFFER
32	BH.132	1	BRISTLE COVER
99	BH.122.3	1	ALTERNATIVE MOTOR WIRING

WHEN ORDERING PLEASE QUOTE PART No. AND PART DESCRIPTION

VICTOR 2021 RANGE

UPRIGHT VACUUM BRUSH DRIVE UNIT

 V-350BH

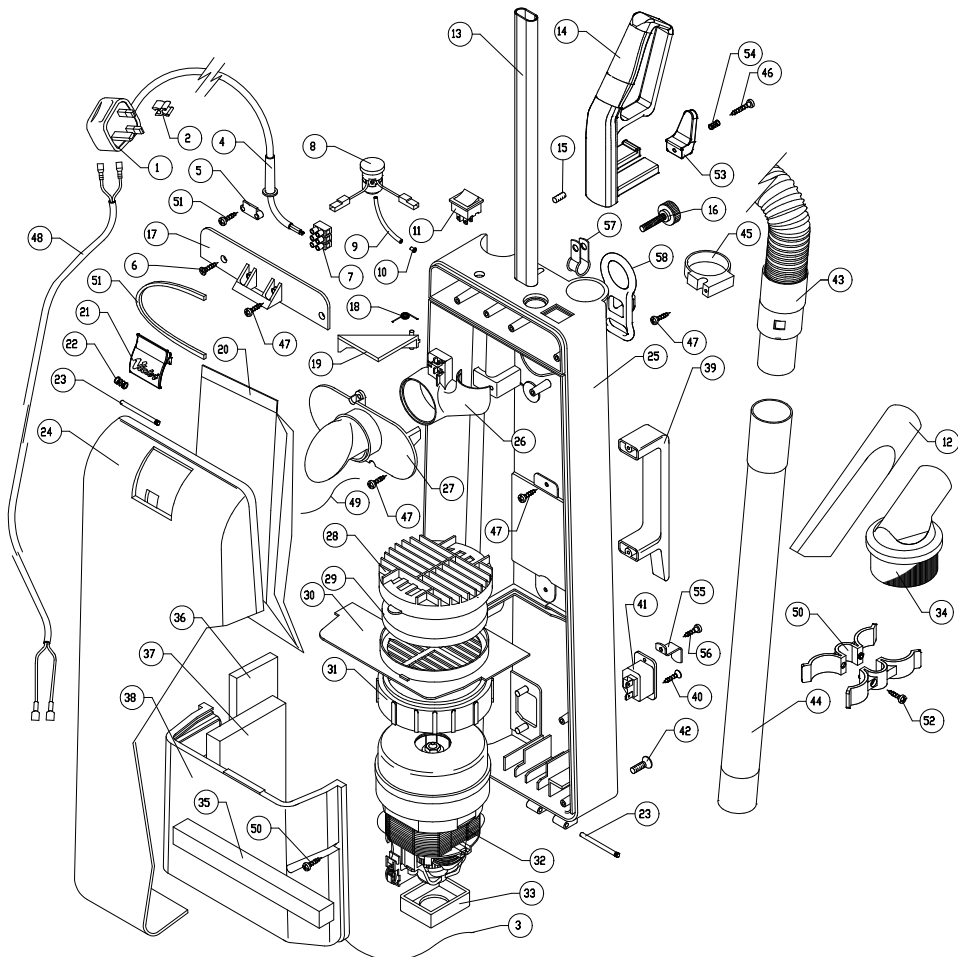

ITEM	PART No.	QTY	DESCRIPTION
1	C4900	1	12.5m CABLE
2	C1010	1	CABLE TIDY
3	SB16190	1	3mm EXPANDED CORD SEAL
4	A2126	1	CABLE GROMMET
5	C1404	1	CABLE CLAMP
6	M4x20CSK-SP	2	M4x20 COUNTERSUNK SPAX
7	SB16254	1	3-WAY TERMINAL BLOCK
8	SB16182	1	BAG FULL INDICATOR
9	SB16209	1	INDICATOR TUBE
10	C1092	1	BRASS EYELET
11	SB16168	1	ON/OFF SWITCH
12	SB16297	1	36mm CREVICE NOZZLE
13	C4080	1	HANDLE TUBE
14	D0821	1	TOP HANDLE
15	SB16272	1	M6x10 SOCKET GRUB SCREW
16	C1052	1	HANDLE TUBE THUMB SCREW
17	B1350	1	CATCH PLATE
18	A2129	1	ARM SPRING
19	B1355	1	NO BAG INDICATOR ARM
20	SB15666	1	PAPER DUST BAG
21	B1352	1	CATCH
22	A2138	1	CATCH SPRING
23	C1037	3	HINGE PIN
24	B1351	1	FRONT CASING
25	B1345	1	REAR CASING
26	C1053	1	INLET ADAPTOR
27	C1495	1	BAG INLET
28	B1348	1	FILTER COVER
29	C1400	1	MICROPARTICLE FILTER
30	B1346	1	MOTOR MOUNTING PLATE
31	A2168	1	RUBBER MOTOR RING
32	SB16264	1	VAC MOTOR
33	A2128	1	MOTOR MOUNTING PAD
34	SB16298	1	36mm ROUND DUSTING BRUSH
35	C1621B	1	FOAM STRIP SEAL
36	C1073	1	EXIT FILTER
37	C1074	1	BAFFLE FOAM
38	B1347	1	MOTOR COVER
39	B1356	1	REAR HANDLE
40	M3x12CSK-SP	1	3x12 COUNTERSUNK SPAX
41	SB16323	1	SOCKET OUTLET
42	M5x12CSK	2	M5x12 COUNTERSUNK
43	D0817	1	HOSE ASSEMBLY
44	C4081	1	DOWN TUBE
45	C1776	1	SUCTION TUBE CLIP
46	M4X35BSP	5	SCREW PH 4 x 35mm SPAX
47	M4X20SP	11	SCREW PH 4 x 20mm SPAX
48	C4079	1	INTERCONNECTING CABLE
49	SB16258/B	1	150mm NYLON CORD
50	B1365	2	TOOL CLIP
51	SB16382	1	INLET NOZZLE DUST SEAL
52	IN6X1ST.PP	2	No6 x 1" AB POINT SELF TAPPING POZI
53	D0760	1	CABLE QUICK RELEASE
54	SB16951	1	COMPRESSION SPRING
55	C1683	1	PLUG RETAINING BRACKET
56	M3X12SP	1	SCREW PH 3x12mm SPAX
57	SB17081	1	'P' CLIP
58	D0550	1	CABLE RESTRAINT

WHEN ORDERING PLEASE QUOTE PART No. AND PART DESCRIPTION



Contact Information:

IIC Products Ltd T/A Victor Floorcare
Lancaster Court
Lancaster Road
Shrewsbury
SY1 3LG
United Kingdom
0121 706 3553