



Instructions Victor Compact Mini Scrubber



In general

The **Victor Compact Mini Scrubber** is a light and easy to handle battery machine for different kinds of daily cleaning activities. The machine is extremely useful for the cleaning of staircases, walls, small rooms and places usually difficult or impossible to reach with conventional machines.

Standard parts and accessories

- The power unit including the drive disc. Std
- Reversible telescope handle, including the adjustable grip. Std
- Battery, NiCd 9,6V 3000 mAh. Std
- Quick battery charger 230 V (or 120 V). Std
- Nylon brushes (several grades of coarseness, suitable for several purposes) are available. Std is normal grade.
- Nylon pads (different grades of coarseness available)
- Micro fibre pad

Before use

- Check if the voltage of the local electricity network (230 or 120 V) is the same as mentioned on the label of the battery charger. Charging of the battery is only permitted in dry areas.
- Put the plug of the charger in the wall socket and yellow led will light up.
- Use only battery chargers, which are recommended by Victor.
- Place battery into the charger. Red light indicates that the battery is being charged.
- When battery is charged and is ready to be used, the green light will light up.
- If the battery is defective or abnormal, red and green lights will be flashing alternatively.
- Fit the battery into the special opening in the motor unit.
- Press the battery firmly down until the catches on the battery lock into place.
- Place the brush with nipples up into the holes of the drive disk on the bottom of the motor. If the nylon brush becomes misshapen during transport or storing, it can be straightened by keeping the brush in hot water for 30 seconds. The brush will regain its original shape.
- Working with pads, they should be placed as central as possible on the driving disk and directly attached to the Velcro. The right working position, depending on the job, will be obtained by fixing the telescope handle to the correct length using the plastic turn lock.
- Use the screw buttons, to fix the adjustable handle to the preferred position.

Reversible telescope handle

- Place the telescope handle in the opening of the handle on the motor and press firmly until the fixing button on the connector engages. Tighten the fixing bolt to retain.
- Before removing the handle, first loosen the fixing bolt. Push the button on the connector of the handle and pull whilst holding down the button.

Operation

For right handed operators:

- Take the adjustable grip into the left hand.
- Take the top handle with on/off switch in the right hand.
- Pull the trigger switch and keep it depressed during use. After the switch is released, motor stops instantly.

As hand held unit only.

- Take the motor part by the plastic grip on top in the right hand.
- The motor part of the **Victor Compact Mini Scrubber** has standard safety lock on top of the grip; this prevents accidental use of trigger switch.
- Push the safety lock with thumb forward, before using the trigger switch. When motor is running the safety lock can be released.
- The motor starts running as soon as the trigger switch has been pulled. The trigger switch continuously pulled keeps motor running. After the switch is released the motor stops instantly.

Notes after every use

- Remove the brush or pad from the machine and clean it thoroughly.
- To avoid distorting the brush store with the bristles up

Recharging the battery

Remove the battery from your Victor Compact Mini Scrubber by pressing the retaining clips either side of the battery.

Plug the battery charger into the supply socket before putting the battery in the charger. The green light will come on.

Allow 5 to 10 minutes before placing the battery into charger. The red light indicates charging is in progress. Charging time is approx 60 minutes.

If you have trouble getting a red light for charging, insert the battery to the charger and remove again within 15 seconds, this resets the safety zone on the battery.

Safety instructions for battery and machine

- **Do not use the charger in wet environments!**
- Always inspect the charger and the supply lead for any damage before use. Use only personnel authorised by the manufacturer for repairs.
- Never destroy old or faulty batteries by burning. They may explode!
- In case liquid from battery contacts skin, proceed as following:
 1. Wash the contacted skin with water and soap.
 2. Neutralise the battery liquid with vinegar or juice of lemon (acid)
 3. If battery liquid contacts the eyes, at once rinse eyes with plenty of clean water. Consult a doctor immediately.

Attention, Old batteries can damage the environment; they should be taken to a centre for hazardous waste and not mixed with normal refuse collection and disposal.

Under extreme conditions, liquid may leak from the battery. This does not necessarily indicate failure or damage.

Other points of attention.

- The **Victor Compact Mini Scrubber** is protected against splashing of liquid, and care should be taken not to submerge the unit in water.
- The **Victor Compact Mini Scrubber** can be fitted with a splashguard; however, we advise that eye and face protection is used against accidental contact with cleaning agents whilst in use.
- When working on stairs or platforms, all relevant safety regulations, should be considered.
- All rotating parts other than the brush or drive disc of the **Victor Compact Mini Scrubber** are protected. Care should be taken to prevent loose garments becoming entangled.

Technical information:

- Standard battery 9,6 V NiCd 3000 mAh
- Quick battery charger 230 V (also available as 120 V) charging time 60 minutes
- Operational time with single battery, approx 1.5 hr
- Drive disk / brush speed 350 rpm
- Brush body and bristle made of nylon
- Drive disk uses 150 mm diameter pads.
- The **Victor Compact Mini Scrubber**, including battery, weights 2,8 kg
- Battery, quick battery charger and the **Victor Compact Mini Scrubber** have CE approval.