

FITTING INSTRUCTION FOR C4900 CABLE

CAUTION: UNPLUG CABLE FROM MAINS SUPPLY BEFORE CHANGING CABLE.

1. REMOVE CABLE FROM CABLE RESTRAINT. (ENLARGE LOOP AND UNHOOK FROM CATCH (Fig 1) AND FEED OUT THROUGH OPENING AT BOTTOM OF CABLE RESTRAINT (Fig 2))

2. REMOVE INLET PLUG FROM SOCKET OF POWER-HEAD OF MACHINE (Fig 3).

3. FIT NEW CABLE (WITH BUILT-IN LOOP) :

ATTACH THE BUILT-IN CABLE LOOP INTO THE CABLE RESTRAINT (Fig 4).

THEN INSERT THE INLET PLUG INTO SOCKET OF POWER-HEAD ON MACHINE (Fig 3).

NOTE:

IF YOU ARE REPLACING A CABLE WHICH HAS THE BUILT-IN LOOP, SIMPLY UNPLUG MACHINE AT BOTH ENDS AND EASE THE LOOP OUT OF THE RESTRAINT AND REPLACE WITH NEW CABLE AS PER POINT 3 ABOVE.

IF THE LOOP IS DAMAGED AND NO LONGER RESTRAINS THE CABLE WE STRONGLY RECOMMEND THAT THE CABLE IS REPLACED.

EU DECLARATION OF CONFORMITY

Machine Type:	Rotary Floor Cleaning Machines Series
Machine Model:	Contractor, Europa, Lynx, Multispeed, Pro, Sprite, Tomcat, Handy, Trojan, Wolf, LM40, Battery Burnisher, Battery Sprite, Battery Lynx
Machine Type:	Vacuums Series
Machine Model:	V9, WD30, WD60, WV35/35N, Woody, V-9B Tub Vacuum, CX7, Mist Pro 360, UCS, Exhauster, SL8000 Steam Vac
Machine Type:	Scrubber Drier Series
Machine Model:	SD40, SX15, SD15, V-SD7C, V-SD7-R, V-SD9/50Q, Hyperglide

Manufactured by Contact Information:
IIC Products Ltd T/A Victor Floorcare
Lancaster Court, Lancaster Road, Shrewsbury, SY1 3LG, United Kingdom

This declaration of conformity is issued under the sole responsibility of the manufacturer; the equipment listed above fulfills all relevant provisions of the following EU directives:

Machinery Directive	2006/42/EC
Low Voltage Directive	2014/35/EU
EMC Directive	2014/30/EU
ROHS Directive	2011/65/EU

Ecodesign requirements for Vacuum Cleaners (EU) 666/2013
(implementing directive 2009/125/EC)

Applicable Harmonised European Standards and technical specifications:

BS EN 60335-1:2012, BS EN 60335-2-2:2010+A11:2012, BS EN 60335-2-67:2012,
BS EN60335-2-68:2012, BS EN 60335-2-69:2012, BS EN55014-1:2006 + A1:2009,
BS EN 55014-2:1997 + A2:2008, BS EN 60335-1:2002+A14:201, EN 61000-3-2

The technical documentation relevant to the above equipment will be held at the address above.

E. J. Blackledge

Edward Blackledge

Managing Director

Date of Issue: October 2020

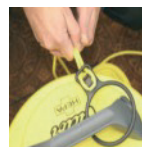 


Fig 1

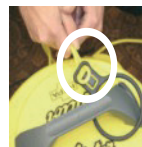 


Fig 2

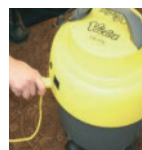 


Fig 3

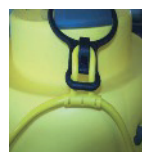 



Fig 4

OPERATING INSTRUCTIONS

IMPORTANT: The HEPA filter and Dust Bag must be in position prior to machine operation.

1) Attaching Hose and Steel Tubes :


 
- Push appropriate end of Hose firmly into the intake radius (pic 1b 5) of the vacuum and rotate clockwise to lock.
- Connect the straight steel tubes together by connecting the dimpled end of one to the smooth end of the other. Then connect the small steel tube to the end of the long tube with the dimples ensuring that the Air Control is nearest the long tube (pic 1a). Finally connect the other end of the small steel tube to the hose.
- Then connect the appropriate tool at the other end:
 - a) SBI6506 32mm Victor V-9 Combo Floor Tool (see note below)
 - b) C1704 32mm Crevice Nozzle.
 - c) C1705 32mm Round Dusting Brush.
 - d) C1706 32mm Carpet/Upholstery Tool

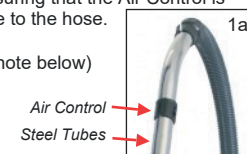

Note: The Combined Floor Tool can be set to vacuum either hard floor or carpeted areas by depressing the switch (as required) located on the top face of the floor tool.

2) Operate the machine.

  - Uncoil cable from its housing around the outside of the Power Head.
- Plug the machine into an appropriate power supply outlet and press the On/Off switch (10) to the ON position.
- Pull the machine behind you as you select the areas to be cleaned.
- Vary the suction level by opening or closing the air intake switch located on the steel tube.

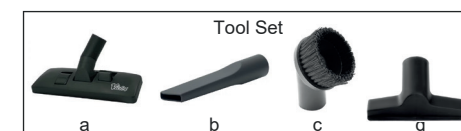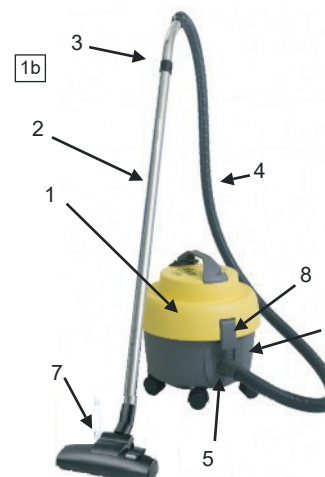

1. Power Head
2. Steel Down tube(s)
3. Air Intake Switch
4. Hose Assembly
5. Intake Radius
6. Bottom Tub
7. Combined Floor Tool
8. Clip
9. Quick Release Cable Inlet
10. On-Off Switch

SPECIFIC MAINTENANCE

Always remove plug from socket outlet before carrying out any specific maintenance

CABLE

After use, always rewind cable back around Power Head section of tub from the cable inlet (Cable restraint) outwards towards the 10Amp plug. This will reduce the risk of cable twist and prolong cable life. (See safety section)

HEPA FILTER

For continued maximum efficiency of the filtration level, regularly remove the HEPA filter assembly from the Power Head and gently shake dust particles clear. It is recommended that the HEPA filter is replaced approximately every twelve months.(See Replacement section)

PAPER FILTER DUST BAG

When the dust bag is full,(motor sound may become higher pitched) remove the dust bag from the Bottom Tub by unclipping the Power Head from the Tub and removing the filter assembly to expose the bag. Remove the dust bag from the air intake radius and dispose of contents in a safe approved location. Place a new dust bag into the radius and replace the above. (See Replacement section).

Please visit our web site: www.victorfloorcare.com to find a full parts diagram for this machine

ROUTINE MAINTENANCE

Always remove plug from socket outlet before carrying out any routine maintenance.

- 1) Wipe all surfaces of the machine after use..
- 2) Wipe power cable clean after use, using a damp cloth. Check cable visually for signs of wear and damage. If any is detected, ensure that it is replaced immediately.
- 3) When cleaning task is completed, wrap power cable carefully around the section of the power head and slot the last few centimetres of cable (at the plug end) into the cut out in the handle.

SAFETY INFORMATION

- This machine should only be used by trained operators.
- Do not use this machine unless it is in a safe condition. Check the cable and plug for damage before use, and if necessary, replace with a new cable pack.
- Ensure that all new cable fitted is fed correctly through the Victor cable restraint harness. Failure to do this may result in damage to, or failure of power supply cable. Ensure that cable is correctly rewound after use. Any warranty claims made in contravention of the above will be invalidated.

NOTE: Only use VICTOR approved cable from our agents or direct.

- Always work within the cable length to avoid cable stress or damage. Do NOT move the machine by pulling the power cable.
- Check that the voltage shown on the serial number plate is suitable for the supply available.
- This machine is designed for dry use only
- All VICTOR Machines have maximum A-Weighted sound pressure level L_{pa} measured in dB(A) is less than 85dB(A).
- The maximum r.m.s. acceleration value of any VICTOR Machine which operators arms are subjected to =1.5m/s².

THIS DRY VACUUM IS FITTED WITH A THERMAL CUT-OUT

The vacuum motor on this machine is fitted with a thermal cut-out. If the machine is overheated, the vacuum motor will cut out and may take some time before the machine will restart. If this does happen to this machine, the cause for the overheating should be determined and the correct remedial action and safety checks should be implemented prior to restart.

IMPORTANT:

Wires in the mains lead are coloured in accordance with the following code:

Blue = Neutral
Brown = Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

- The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Black.
- The wire which is coloured Brown must be connected to the terminal which is marked with the letter L or coloured Red.

REPLACEMENTS

To purchase replacements visit our web site www.victorfloorcare.com

SBI5520P Dust Bags (Pkt 10)
C1842 Hepa Filter Assembly
C4900 High Visibility Quick Release Cable Pack c/w Cable Restraint (See Over)

WARRANTY POLICY

With the exception of Distributors, this warranty applies to the original purchaser of the product from IIC Products Ltd., (The Company) for the following periods:

Vacuum Cleaners – Motors 2 Years, all other components 1 Year

This warranty **excludes** normal maintenance parts and consumables such as hoses, filters, drive belts, floor tools, cables, capacitors, relays, skirts and pads etc. that are considered replaceable during the normal working life of the machine. This list is not exhaustive.

- The warranty period commences from the date the goods are purchased by the user.
- All warranty claims must be processed through the Distributor from whom the equipment was purchased.
- The Distributor will be responsible for the service, maintenance and repairs during the warranty period.
- The Distributor will co-operate with the purchaser throughout the warranty claims procedure and will arrange any necessary repairs using genuine Victor parts.
- If the original Distributor is no longer available to fulfil his obligations, or if you did not make your original purchase through a distributor, the Company should be contacted and given details of proof of purchase and full details of the claim in order that the claim may be processed without delay.
- Any warranty claim can only relate to the specific part that is proven to be at fault and for which a replacement will be supplied but cannot be extended to constitute a claim against the complete appliance.
- The Company will supply the Distributor with any warranty parts required subject to the claim being validated after return of the faulty items in accordance with the Company's Conditions of Sale.
- All replacement parts are guaranteed for a period of 6 months.
- Claims will not be accepted if they are the result of fair wear and tear, misuse or abuse of any kind, acts of God, damage in transit other than original product delivery, failure due to lack of proper care or maintenance or failure to comply with safety guidance.
- No replacement will be given unless the appropriate evidence of the validity of the claim has been provided to the satisfaction of the Company.

The Company reserves the right to charge for any unnecessary work carried out as a result of an invalid claim.

No variation to this warranty may be made or implied by any member of the Company, its Distributors or representatives unless such variation is in writing and authorised by the Company.



Products bearing this symbol should not be disposed of in your general waste. IIC Products Ltd is a registered producer under the WEEE Directive and has procedures in place for dealing with the end of life treatment and disposal of obligated equipment. Please contact the Company or visit our web site for more details.



Celebrating 75 Years of Victor
MAKING MIGHTY MACHINES SINCE 1946

OPERATING INSTRUCTION MANUAL

V-9

HEPA DRY TUB VACUUM



Model	Cleaning Width	Productivity Per Hour	Vacuum Motor Watts	Capacity (Litres)
V-9	270mm	250m ²	700	9

WARNING: Do not use the appliance without reading the instruction manual.
This appliance is suitable for use in Schools, Hospitals, Hotels, Offices etc.

CAUTION: This machine is not suitable for picking up hazardous dust or flammable materials.

NOTE: This document contains warranty information.

Contact Information:
IIC Products Ltd T/A Victor Floorcare
Lancaster Court, Lancaster Road. Shrewsbury. SY1 3LG
United Kingdom
0121 706 3553
Email: sales@victorfloorcare.com
Web: www.victorfloorcare.com